

Exporting XSTD Files from i-CATVision

XSTD files are the native format used by Xoran software on the i-CAT Classic.

Step 1

Launch i-CAT Vision and load the patient data.

Step 2

Go to **Tools**->**Plug_Ins** and click **XSTD Exporter** (if you can't see it, the XSTD Exporter plug-in will need to be installed).



Step 3

The following dialogue box will open:

XSTD Exporter	
Version 1.00 - Copyright (c) 2008 Imaging Sciences International Name:	
Brown^David	
Output Folder:	
C:\USIP\XSTD	
Status:	
Click "Export" button to start the conversion.	
Options Export	Cancel

The Output Folder is C:\ISIP\XSTD in this example. To select a different Output Folder, click "**Options**" and then "**Browse**".

Step 4

Note the path to the Output Folder and click Export:



Step 5

The following dialogue box will appear while the images are being exported:

XSTD Exporter	
Version 1.00 - Copyright (c) 2008 Imag Name:	ging Sciences International
Brown^David	
Output Folder:	
C:\ISIP\XSTD	
Status:	
Exporting 197 frames. Please wait .	•
Options	Export Cancel

Step 6 (optional)

Close i-CATVision and navigate to the Output Folder (C:\ISIP\XSTD in this example) to find the .xstd file you just created.

Double click the .xstd file and Xoran will launch automatically and display your images.

Alternatively - launch Xoran manually - select **Import** and browse to the Output Folder to import the .xstd file.

Created by Simon du Plooy Revised 2015-01-15 RAR Last Revised 2020-03-07 DF/RAR